how to vote
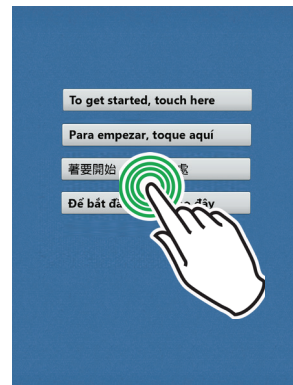
1 Use the touch screen to select your preferred language (if multiple languages are available).
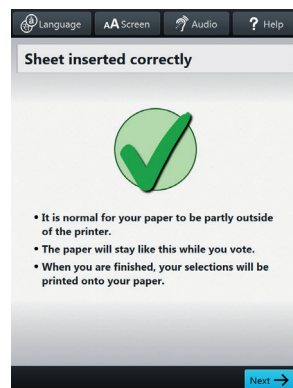
To get started, touch here
Para empezar, toque aquí
若要開始
Để bắt đầu

2 When prompted, feed **ONE** sheet of ballot paper as shown on screen.
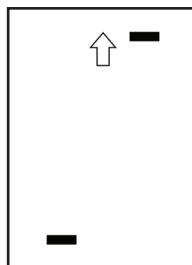
3 Follow the prompts on screen to mark, review, and print your ballot.

If you were given TWO ballot sheets: When prompted after the first sheet has printed, remove the *first* sheet of your ballot and then feed the *second* sheet.

Language   Screen   Audio   Help

Sheet inserted correctly

- It is normal for your paper to be partly outside of the printer.
- The paper will stay like this while you vote.
- When you are finished, your selections will be printed onto your paper.

Next →

4 Retrieve your printed ballot sheet(s) and take them to the scanning device to cast your ballot. **Scan one sheet at a time.**

6682-022 A